

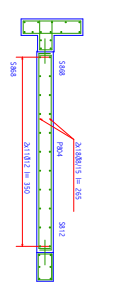
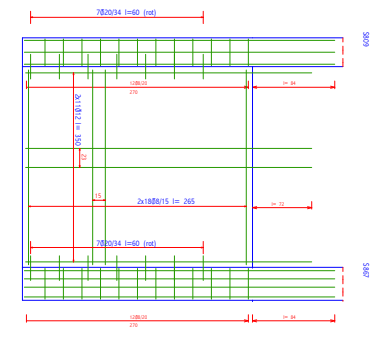




P803 PERDE DEWAM

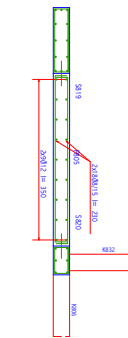



P804 PERDE DEWAM

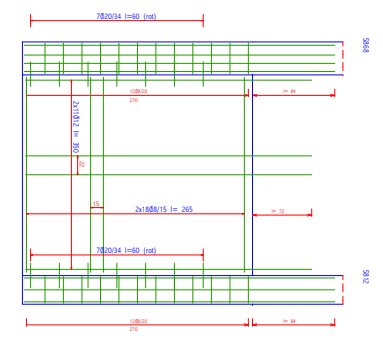



P805 PERDE DEWAM

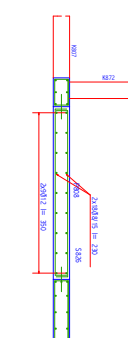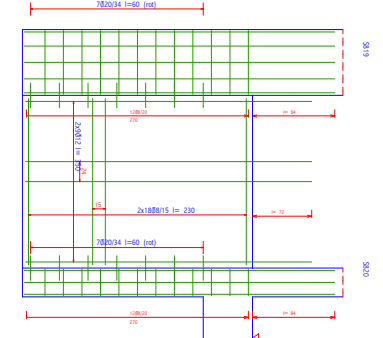



P806 PERDE DEWAM

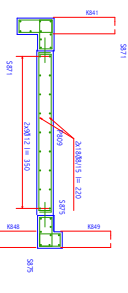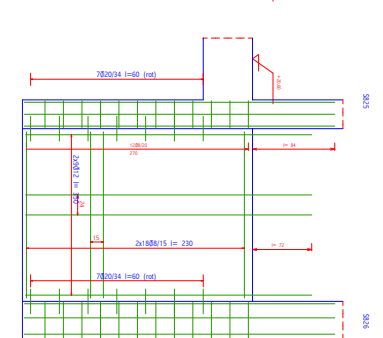



P809 PERDE DEWAM

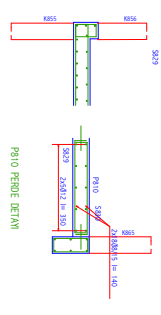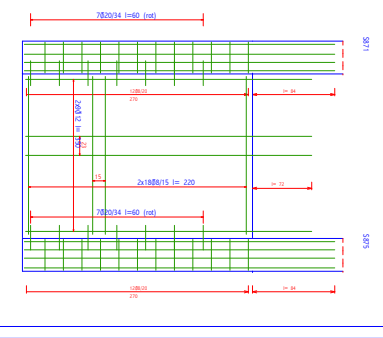



P810 PERDE DEWAM

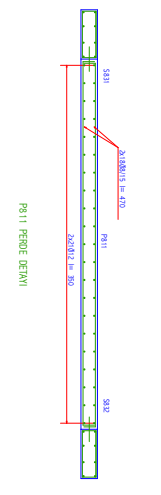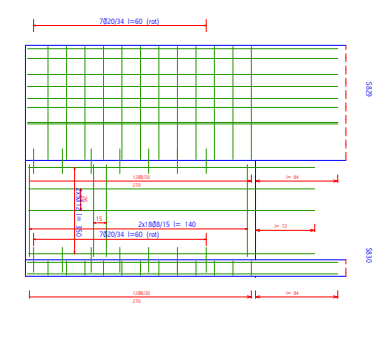



P811 PERDE DEWAM

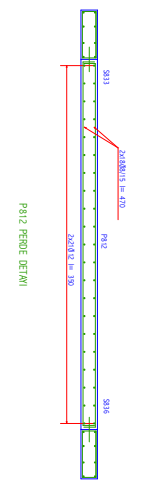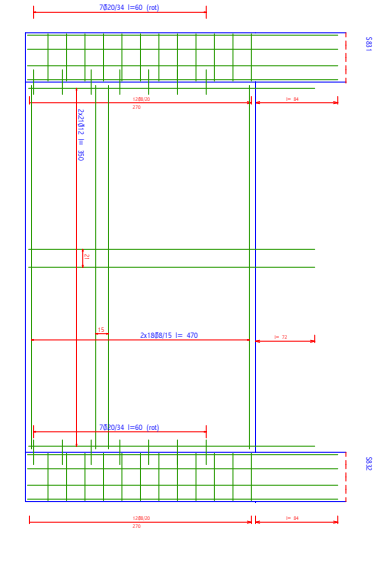



P812 PERDE DEWAM

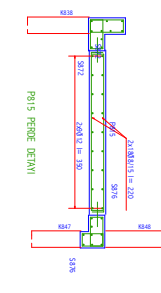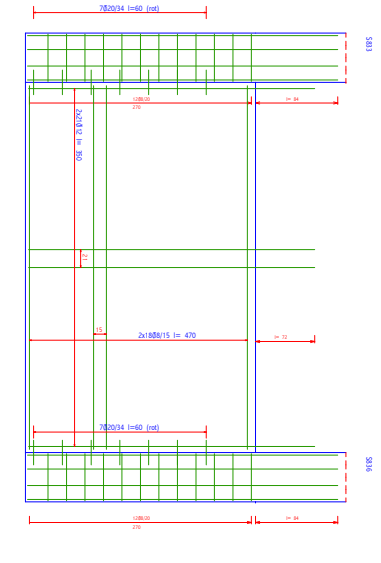



P815 PERDE DEWAM

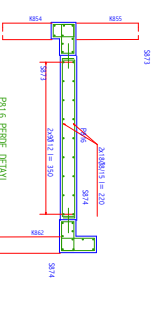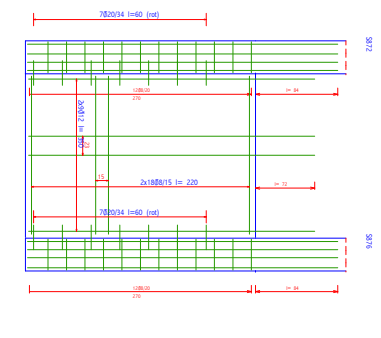

P816 PERDE DEWAM

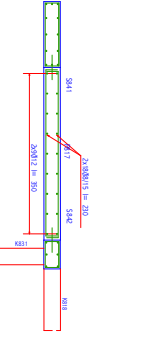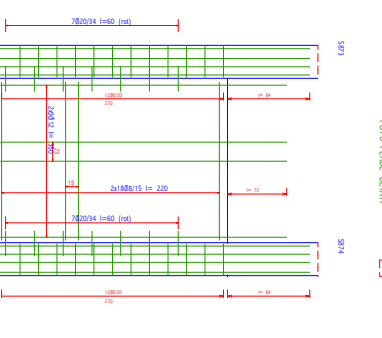

P817 PERDE DEWAM

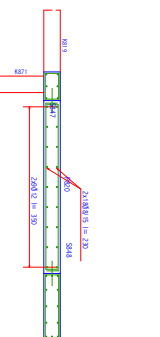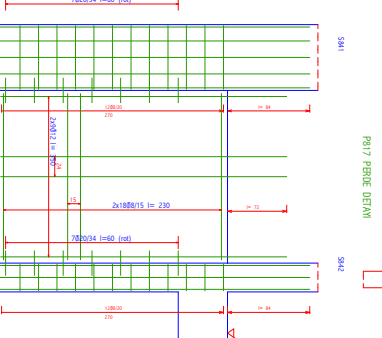

P820 PERDE DEWAM

